§117.239

and there are no vessels transiting in the area. While the bridge is moving, the operator shall maintain constant surveillance of the navigation channel.

- (5) Before closing the draw, the channel traffic lights would change from flashing green to flashing red, the horn will sound five short blasts, and an audio voice warning stating, "Attention, Attention, Norfolk Southern Railroad Bridge over Christina River at milepost 1.4 will be closing to river traffic." Five short blasts of the horn will continue until the bridge is seated and locked down to vessels. The channel traffic lights will continue to flash red.
- (6) When the rail traffic has cleared, the horn will sound one prolonged blast followed by one short blast to indicate the draw is opening to vessel traffic. During the opening swing movement, the channel traffic lights would flash red until the bridge returns to the fully open position. In the full open position to vessels, the bridge channel lights will flash green followed by an announcement stating, "Security, security, security. Norfolk Southern Railroad Bridge over Christina River at mile 1.4 is open for river traffic." Vessels shall stay clear of both channels as to not interfere with infrared detectors, until green lights are displayed on the swing span.
- (c) In Wilmington DE, the draw of the Third Street Bridge at mile 2.3, shall open on signal, the draws of the Walnut Street Bridge at mile 2.8, and the Market Street Bridge at mile 3.0, shall open on signal if at least eight hours notice is given. From 7 a.m. to 8 a.m. and 4:30 p.m. to 5:30 p.m., Monday through Saturday except holidays, the draws of these three bridges need not be opened for the passage of vessels. Any vessel which has passed through one or more of these bridges immediately prior to a closed period and which requires passage through the other bridge or bridges in order to continue to its destination shall be passed through the draw or draws of the bridge or bridges without delay.
- (d) The draws of the Norfolk Southern Railroad bridges, at miles 4.1 and 4.2, both at Wilmington, shall open on signal from 6 a.m. to 8 p.m. if at least 24 hours notice is given. From 8 p.m. to

6 a.m., the draws need not be opened for the passage of vessels.

(e) The draw of the SH141 bridge, mile 7.5 at Wilmington, shall open on signal if at least 24 hours notice is given.

[CGD 82-025, 49 FR 17452, Apr. 24, 1984, as amended by CGD3 84-06, 49 FR 33448, Aug. 23, 1984, CGD3 85-42, 50 FR 26712, June 28, 1985; CGD 87-035, 52 FR 33812, Sept. 8, 1987; CGD05-04-168, 70 FR 4016, Jan. 28, 2005; USCG-2012-1085, 78 FR 61182, Oct. 3, 2013]

§117.239 Lewes and Rehoboth Canal.

- (a) The draw of the Savannah Road/SR 18 Bridge, at mile 1.7, in Lewes shall open on signal if at least four hours notice is given.
- (b) The draw of the SR 14A Bridge, at mile 6.7, in Rehoboth shall open on signal if at least 24 hours notice is given.

[CGD05-06-089, 72 FR 5619, Feb. 7, 2007]

§117.241 Mispillion River.

The draw of the Route 1/Rehoboth Blvd. Bridge, at mile 11.0, at Milford shall open on signal if at least 24 hours notice is given.

[CGD05-06-089, 72 FR 5619, Feb. 7, 2007, as amended by USCG-2011-0257, 76 FR 31837, June 2, 2011]

§117.243 Nanticoke River.

- (a) The draw of the Norfolk Southern Railway Bridge, mile 39.4 in Seaford, will operate as follows:
- (1) From March 15 through November 15, the draw will open on signal for all vessels except that from 11 p.m. to 5 a.m. at least 2½ hours notice will be required.
- (2) At all times, from November 16 through March 14, the draw will open on signal if at least 2½ hours notice is given.
- (3) When notice is required, the owner operator of the vessel must provide the train dispatcher with an estimated time of passage by calling (717) 215–0379 or (609) 412–4338.
- (b) The draw of the SR 13 Bridge, mile 39.6 in Seaford, shall open on signal, except from 6 p.m. to 8 a.m., from April 1 through October 31; from November 1 through March 31, Monday to Friday, and on Saturday and Sunday